


Quick Manual for PI Winder

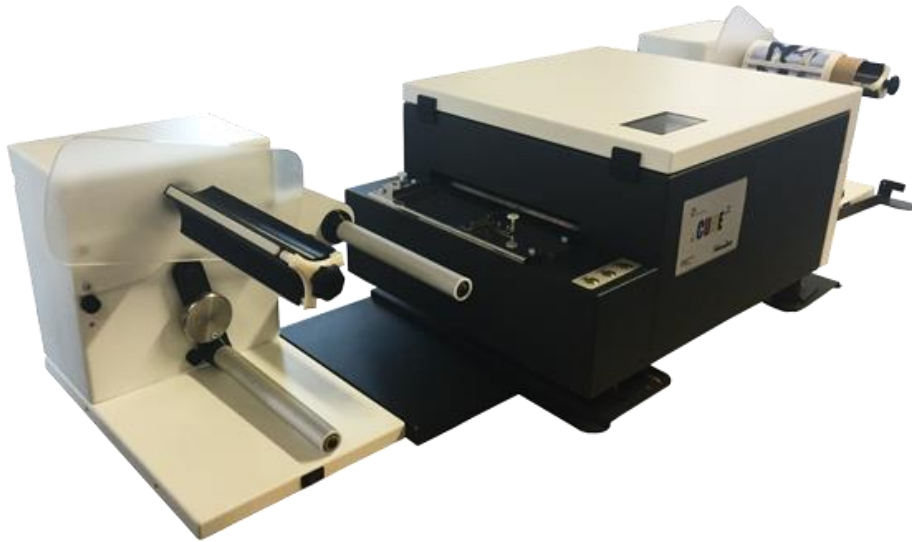

Revision: 1.4

Table of contents

1. Installation of the PI Winder	3
1.1. Unboxing and Installation of the PI Winder	3
1.2. Control of the content	3

1. Installation of the PI Winder

1.1 Unboxing and Installation of the PI Winder

The PI Winder will be shipped in the padded box. Open the box and lift the Winder out of the box. Only use the Holes at the front and the back for it. **DO NOT** lift it up using the roll. The roll can twist due to the weight of the winder.

Put the feet of the ICUBE into the holes of the plate and tight the screws. Then put the winder on the plate and fix it with the screws.

NOTE: We recommend to keep the box if the winder needs to be shipped back in case of warranty.

NOTE for using a PI Rewinder: Lift up the printer up to 1cm that the front door can be opened properly when using a PI Rewinder. Check that all four feet are similar.



1.2 Control of the content

Control the list to be sure that you have got all needed parts.

- PI Winder
- 1 Ground Plate for Unwinder/Rewinder according tot he order
- 1 Power Supply
- 1 set of screws



Ground Plate Unwinder



1 Set with screws



Ground Plate Rewinder



Power Supply